



## City Rover Immobiliser Bypass Unit Fitting Instructions: v1

1, Slide the driver's seat all the way forwards. Remove the cover, by undoing the 2 thumbscrews shown

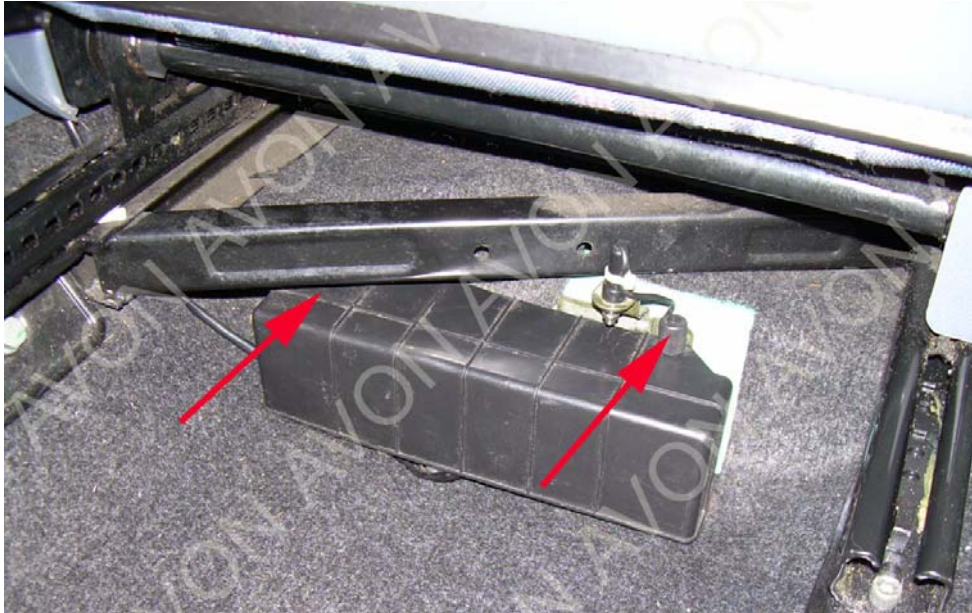

2, Unplug the original immobiliser unit, by depressing the 2 connector tabs, as shown, and pulling the connectors out. There is no need to remove the original unit

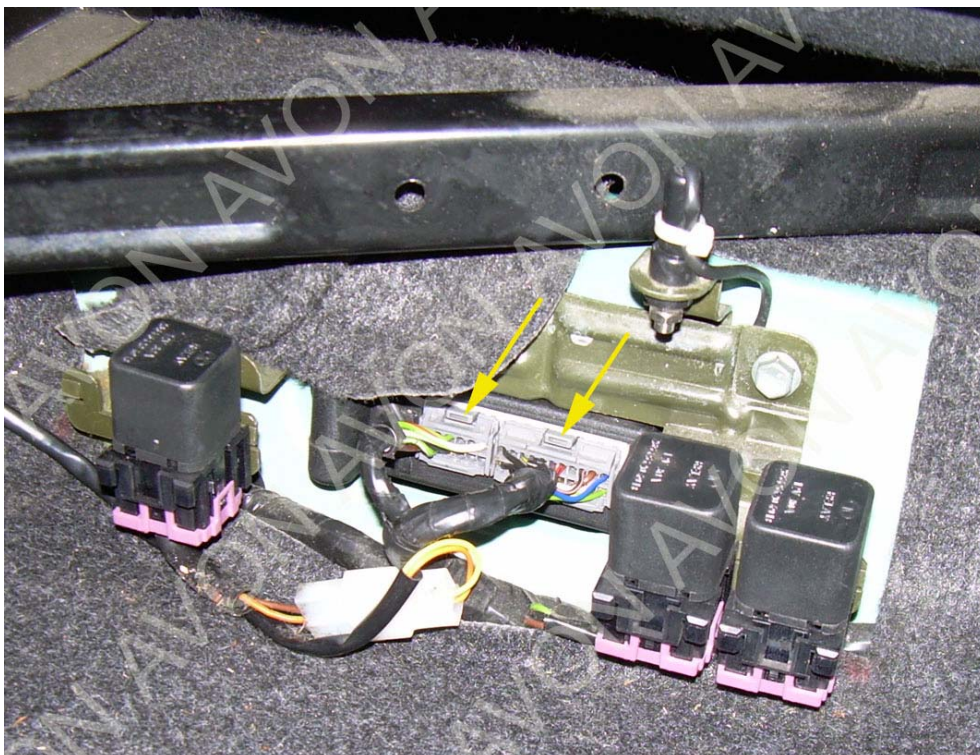

3, Plug the new unit in



4, Turn ignition on, and leave it on until the security LED on the instrument pack goes out. The car can now be started.

